

## TO INSTALL

- 1) To clear installation area at first.
- 2) To use cement blender to mix cement adhesive with water. (25KG cement adhesive add 5.5-6.5kg water).
- 3) Until cement adhesive in thick situation and then leave it for 3-5 mins. (Need stir again before using)
- 4) Use the plastering trowel with teeth to put cement adhesive on the installation area.  
(Notes: The pebble stone size is 3-5mm---- the cement adhesive thickness is 2-3mm  
The pebble stone size is 7-9mm---- the cement adhesive thickness is 3-5mm  
The pebble stone size is 9-14mm----the cement adhesive thickness is 3-5mm).
- 5) To use tool to swat pebble mosaic let cement through the holes.  
(Notes: make sure cement adhesive through the hole of net to reach half high thickness of pebble stone.)
- 6) Put pebble mosaic on the top the cement adhesive, one piece by one piece, or one roll by one roll to make sure edge line in connection to avoid seam line. When you complete installation, please keep 15 mins don't move it. If you need to adjust pebble mosaic area, we need to move cement adhesive and re-put new cement adhesive on the install area.  
(Notes: To install pebble mosaic on the wall that have to start from button to top. To avoid pebble mosaic slide down.)
- 7) When you see the cement adhesive contamination the pebble surface, you can use sponge with water to clear it.
- 8) After we need to leave for 24 -48 hours and then start to do grout.

Above 1 to 7 processes that we are usually install pebble mosaic on the wall and without grout. If you need to grout, please see next page for grout.


Notes: 25kg of cement adhesive:

Pebble stone size: 3-5mm----- complete installation area 10-11 M2

7-9mm----- complete installation area 9-10 M2

9-14mm----- complete installation area 8-9 M2

Plaster trowel for Pebble size (9-14, 7-9, 3-5mm)

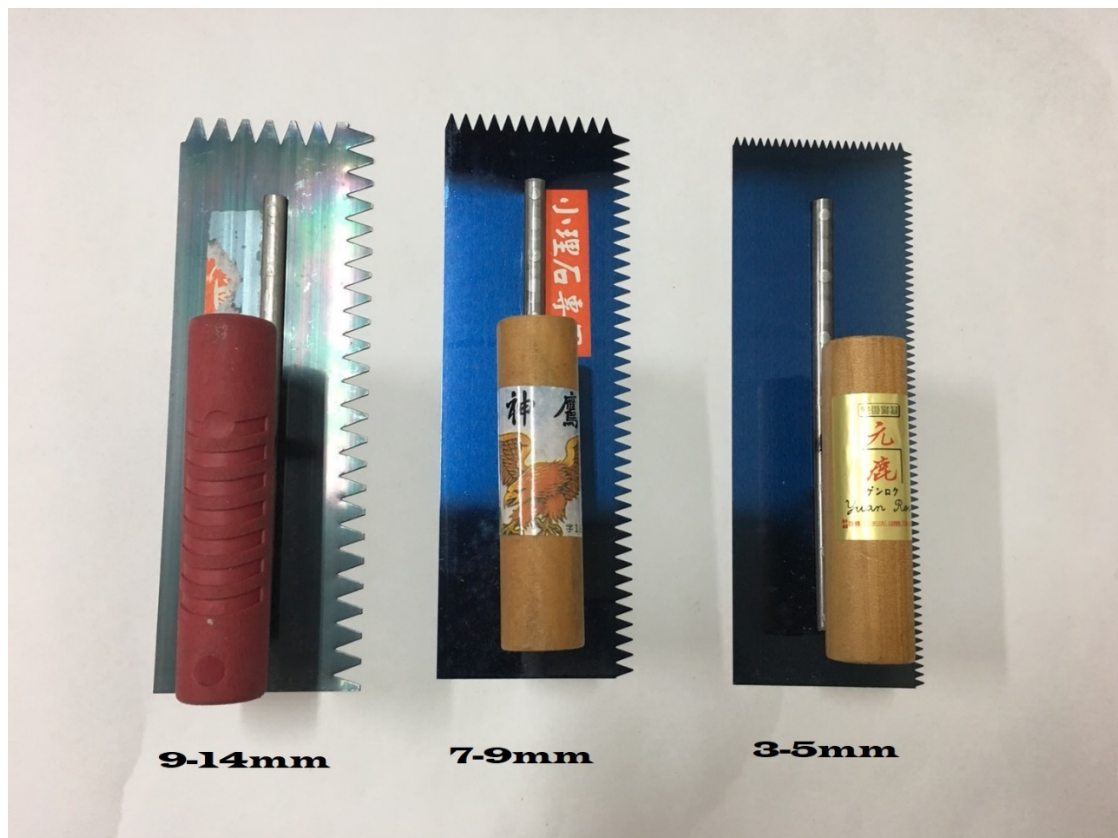

Cement adhesive: Would you to choose similar




### TO GROUT:

- 1) To use cement blender to mix cement base with water. (25KG cement base add) and 6-7kg water leave it for 3-5mins (need stir again before using). 6-7kg water
- 2) To use sponge trowel to fill up the holes.
- 3) After 5 mins stat to clear cement base by sponge and water
- 4) To complete all process we have to keep 4-6 days let cement become solid.

Notes: 25 kg cement base

Pebble stone size: 3-5mm----- 12M2

7-9mm-----11M2

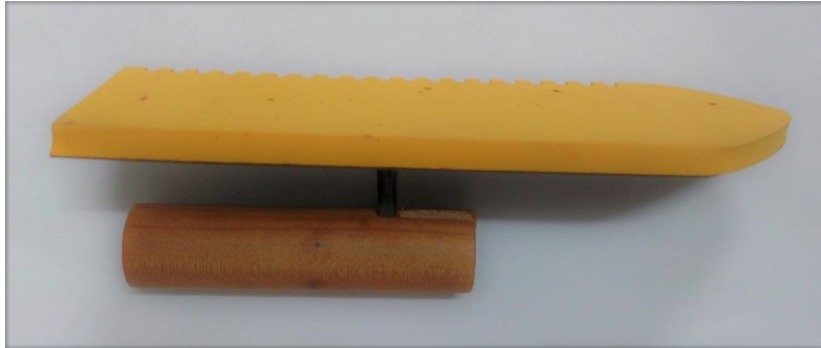

(grout)



(without grout)